





LAURA PICNIC TABLE ASSEMBLY INSTRUCTIONS

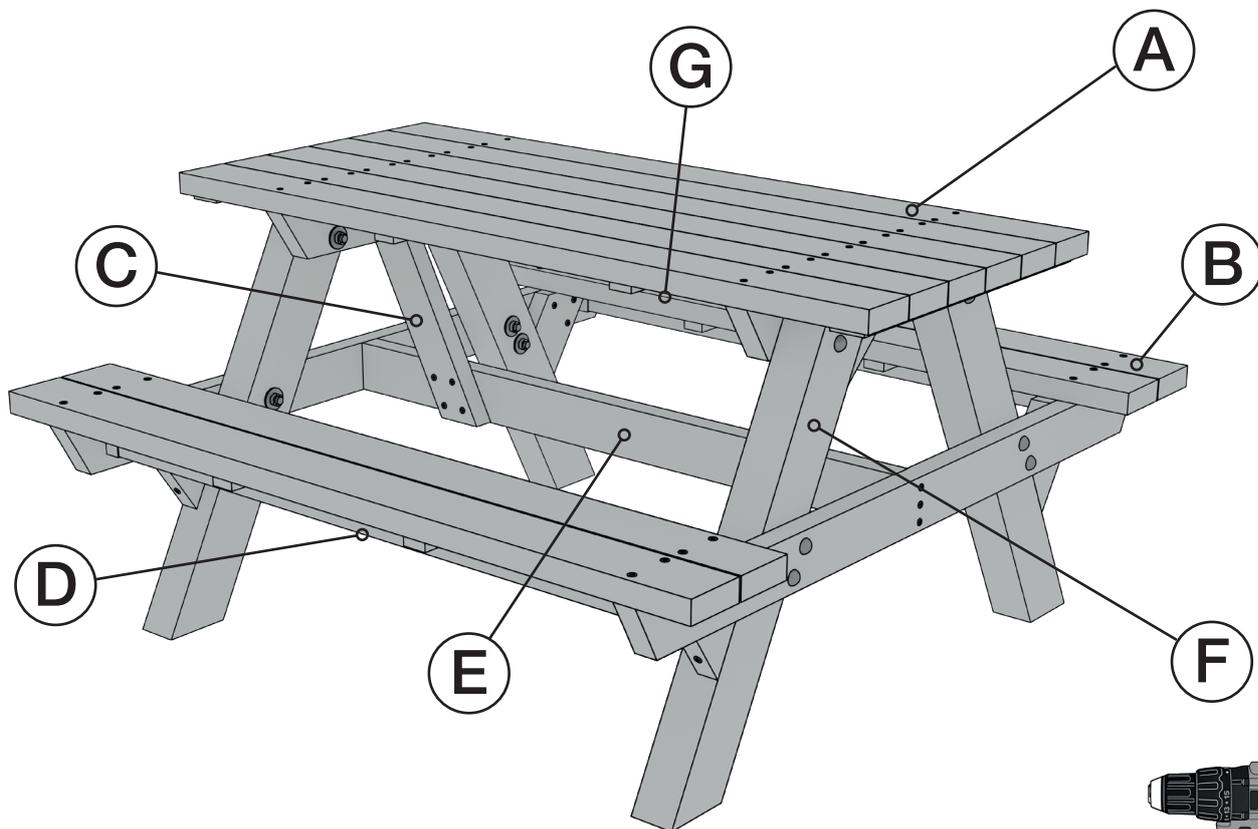


COMPONENTS

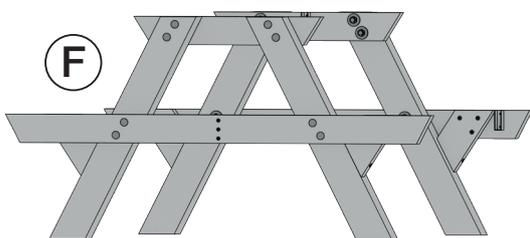

F

A

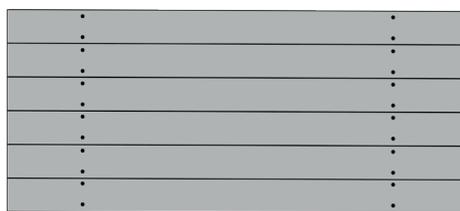


Tools required: Battery drill and PZ3 drill bit

6x150mm - 6pcs

6x100mm - 40pcs

6x80mm - 8pcs


B

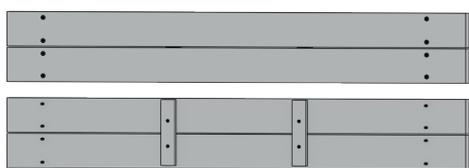

G




D



E




C

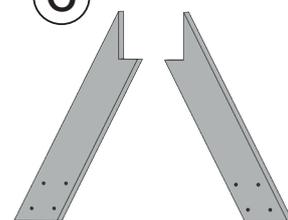


1.

STAND UP THE A FRAME LEGS ON AN EVENLY FLAT AREA
BRACKETS ARE FACING TOWARDS EACH OTHER.

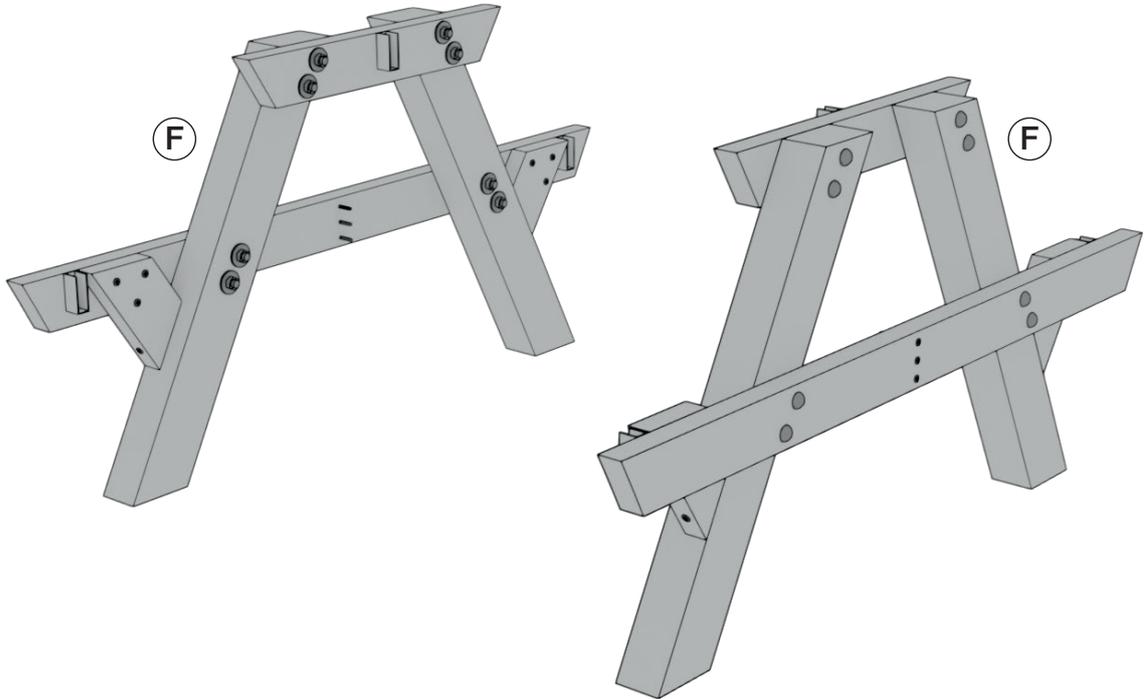


2.

GET THE PLASTIC LEG BAR AND
SCREW TO ONE OF THE A FRAME LEG,
USE 6X150MM ZINK SILVER SCREWS.

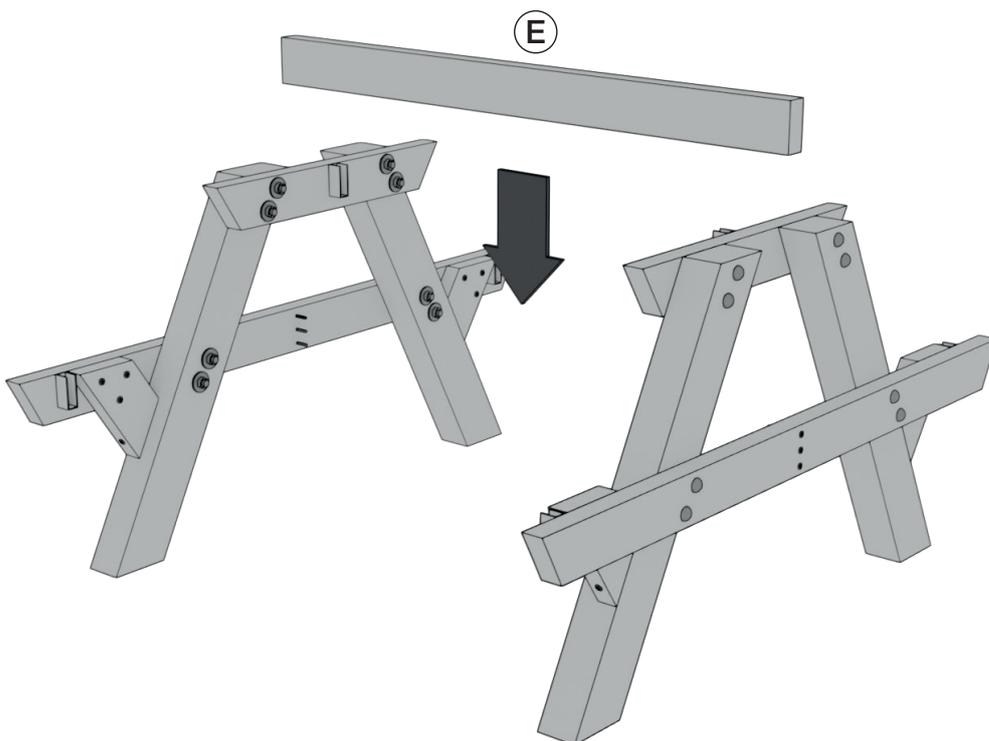


3.

FIX THE LEG BAR TO THE OTHER
A FRAME FIX THE LEGBAR WITH
6X150MM ZINK SILVER SCREWS.

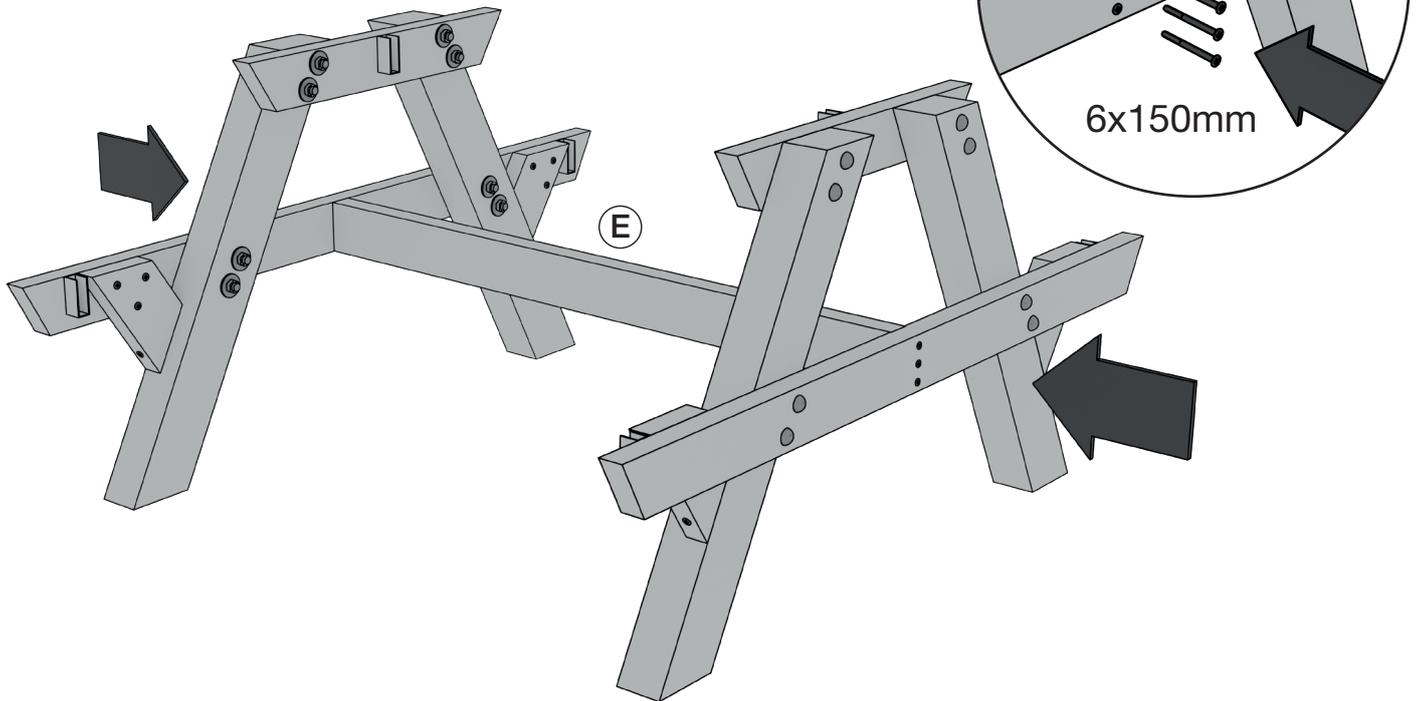




4.

PLACE THE 3 STEEL
BARS IN THE BRACKETS.

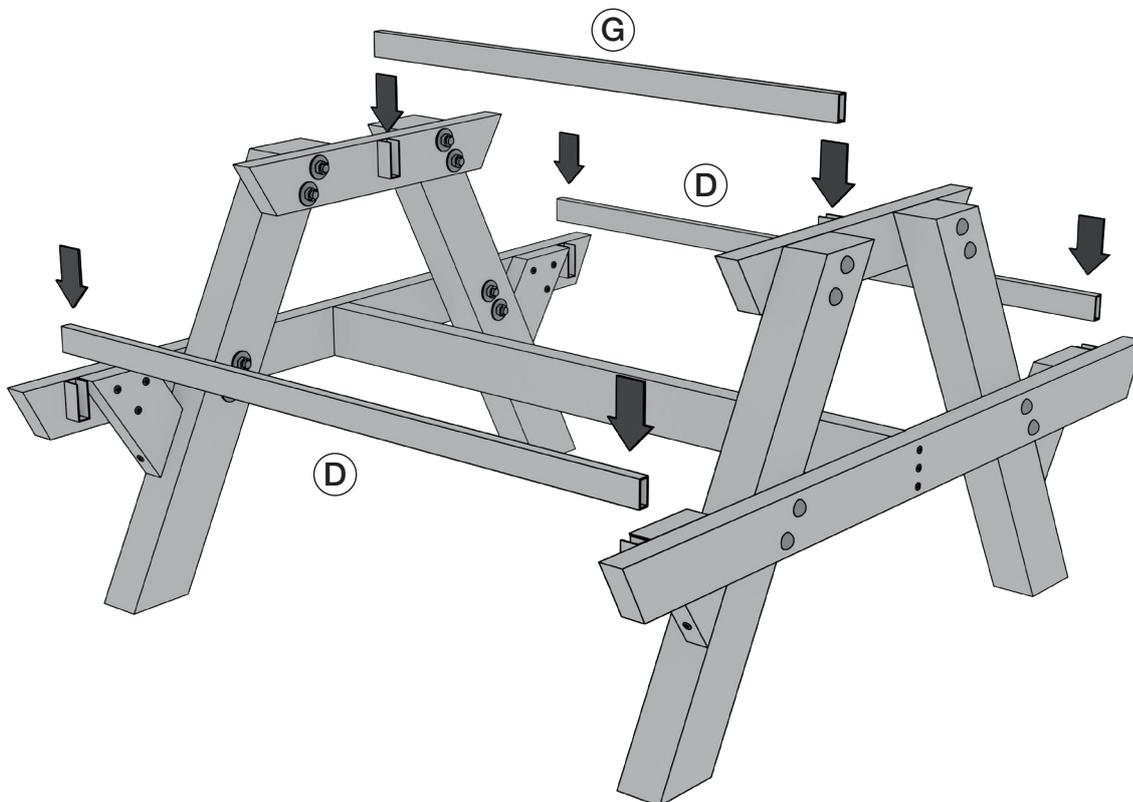


5.

FIX THE PLASTIC STIFFING BRACKETS TO THE LEG BAR, USE 6X80MM ZINK SILVER SCREWS.

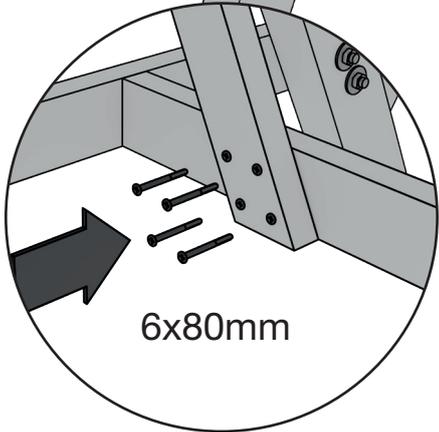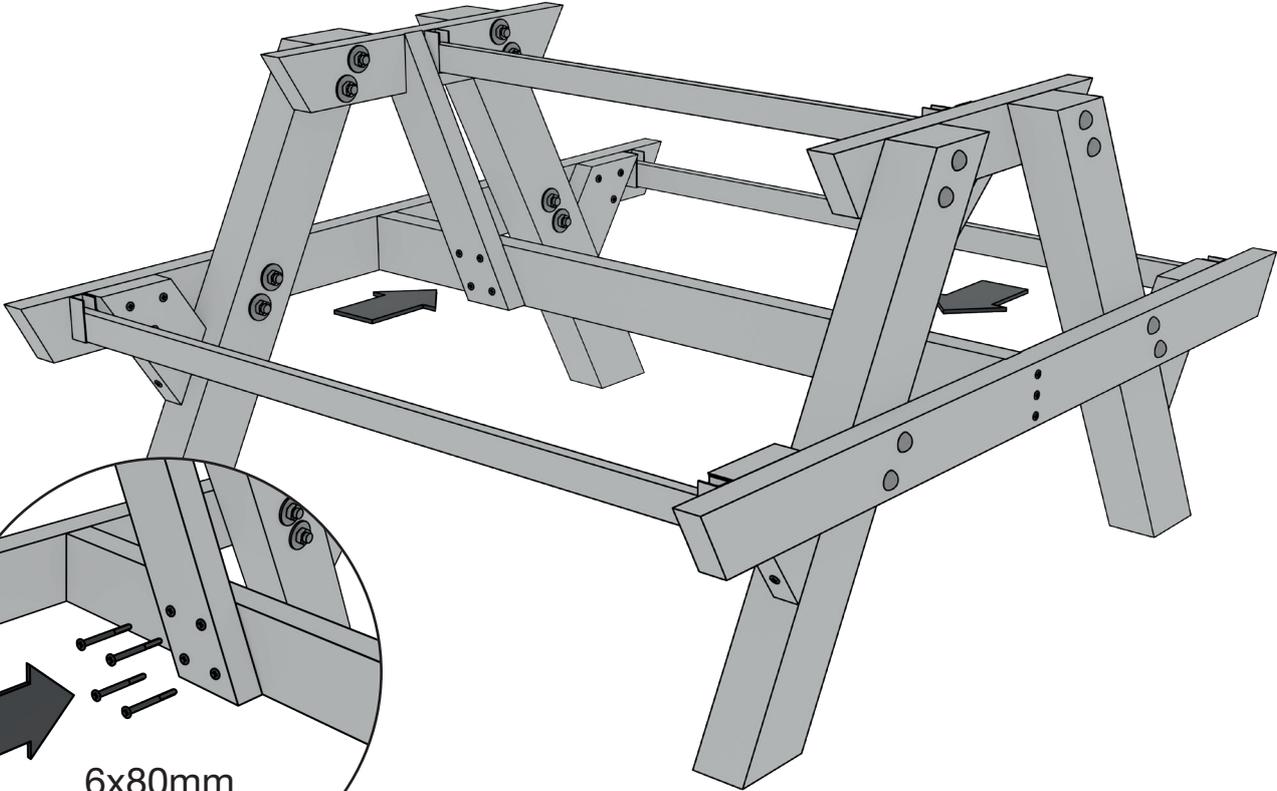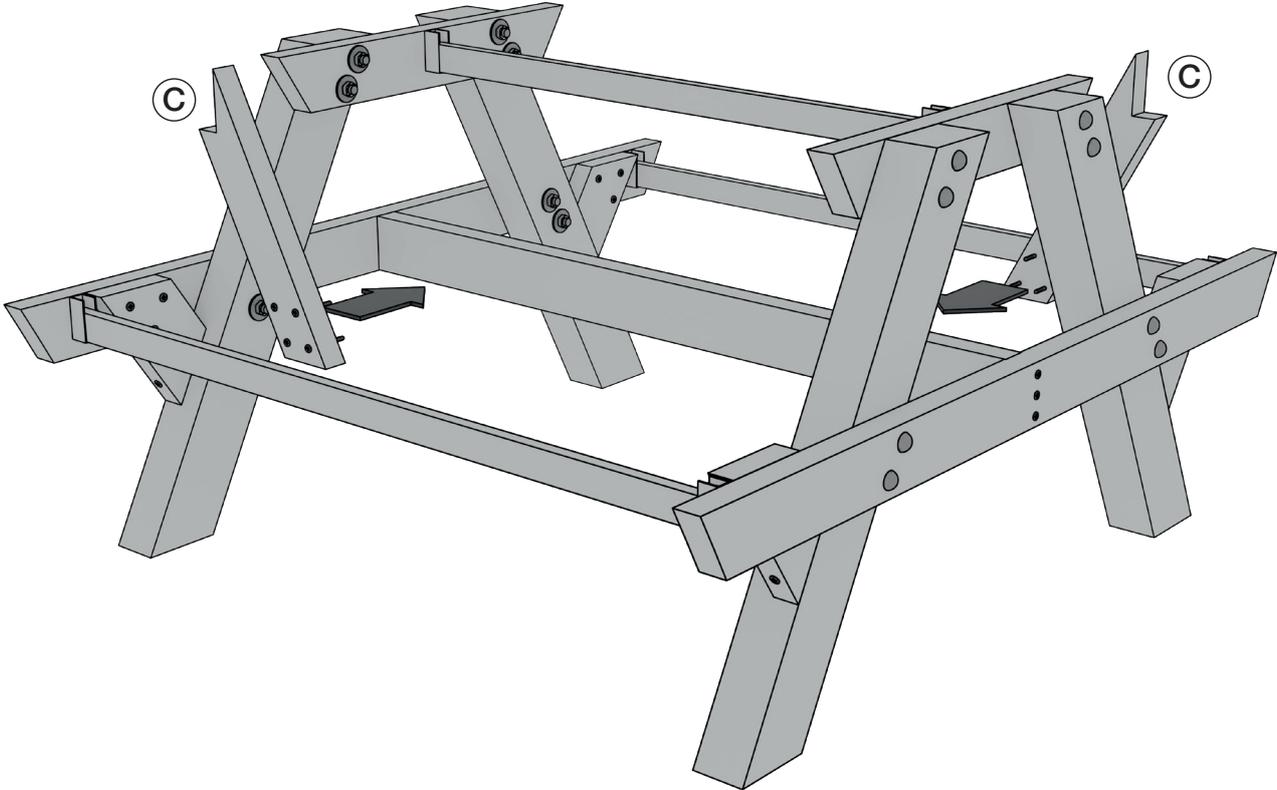

6.

PLACE THE TABLE TOP ON THE A FRAMES, SCREW HOLES CENTERED IN THE TOP FRAME BAR. SCREW THE TABLE TOP WITH 6X100MM ZINK SILVER SCREWS.

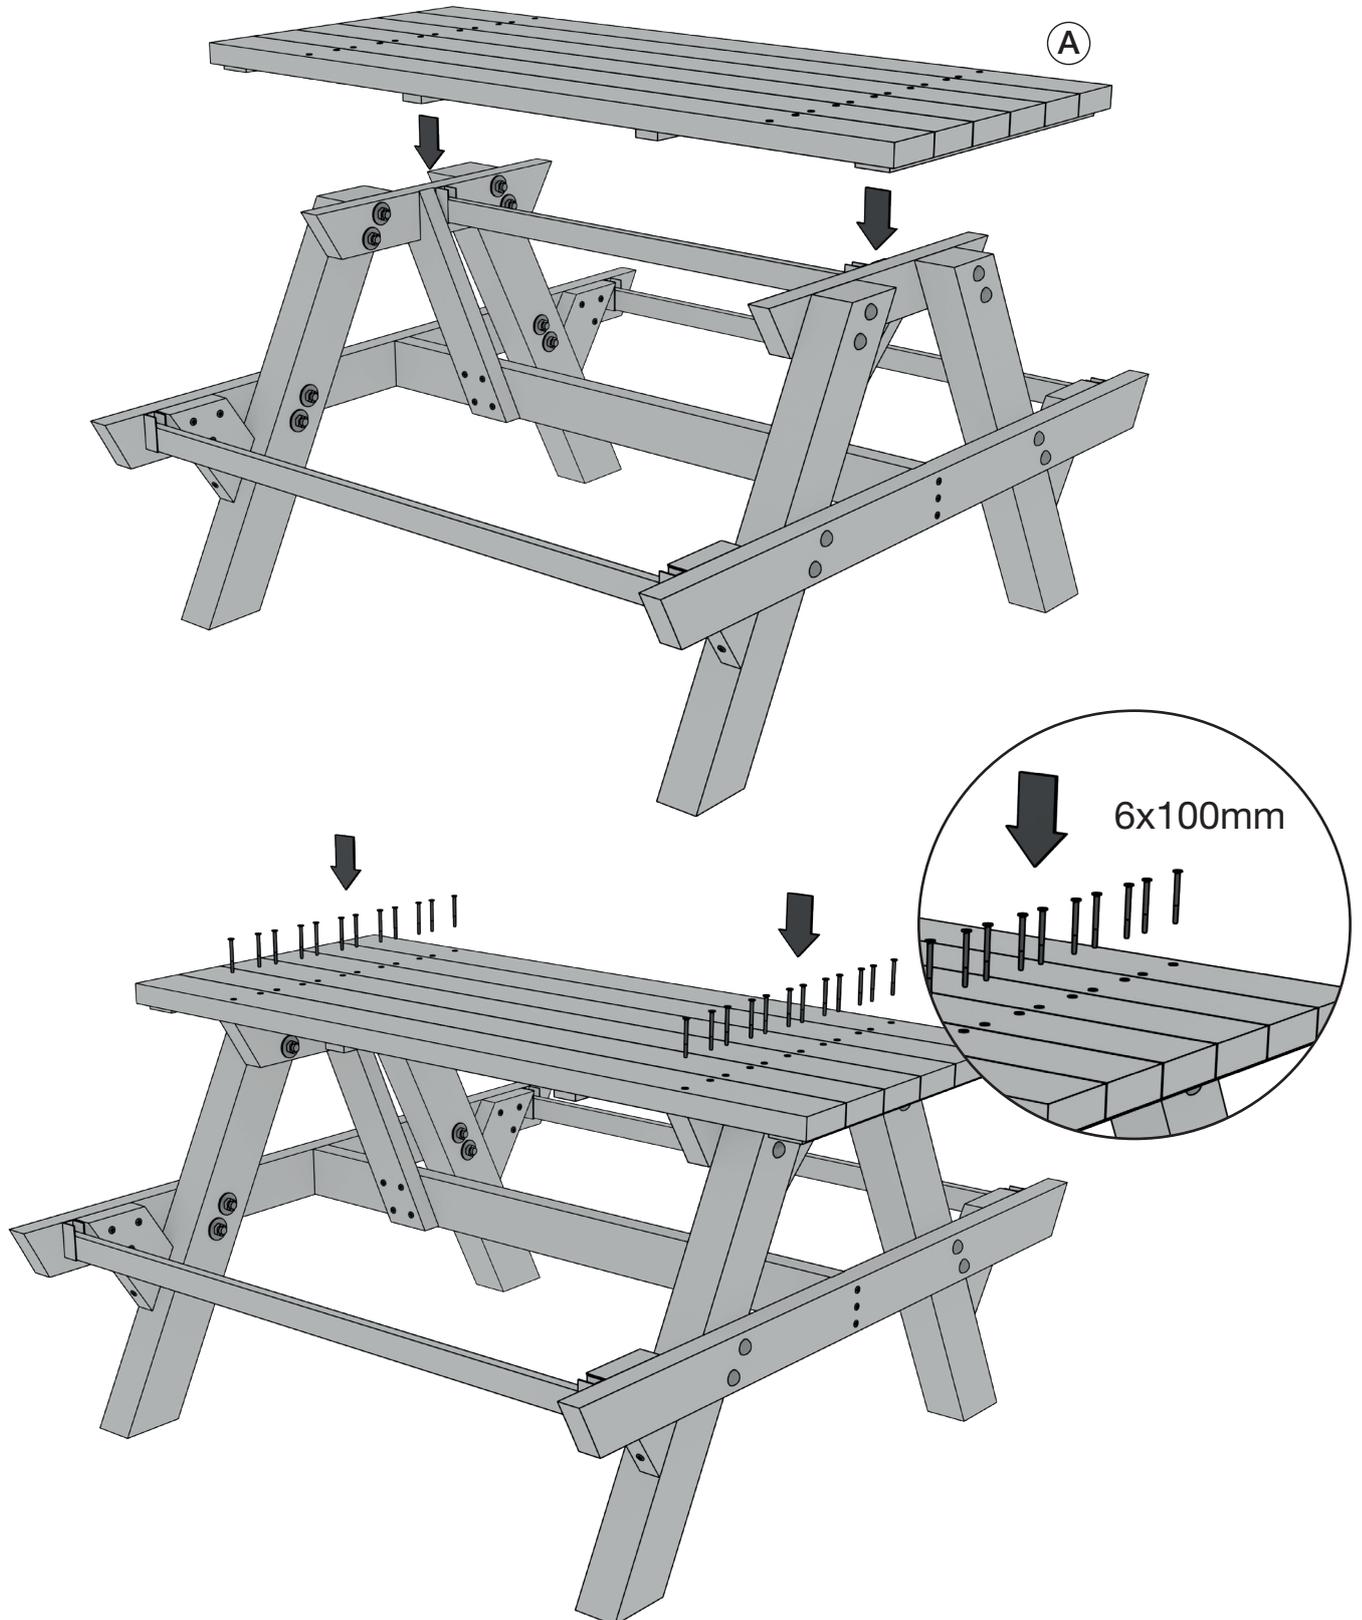

7.

PLACE THE SEATS ON THE CROSS BAR AND
FIX THEM WITH 6X100MM ZINK SILVER SCREWS.

