




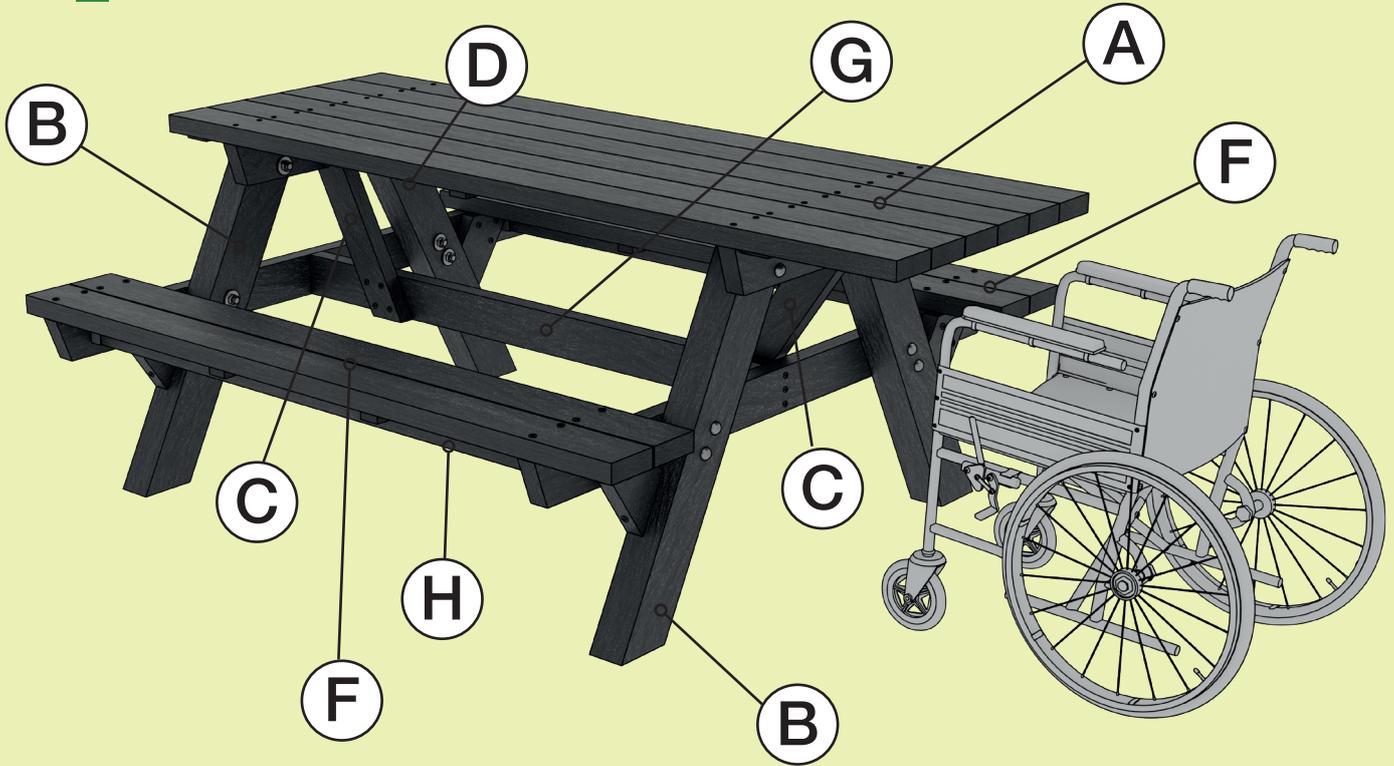


JANE ASSEMBLY INSTRUCTIONS

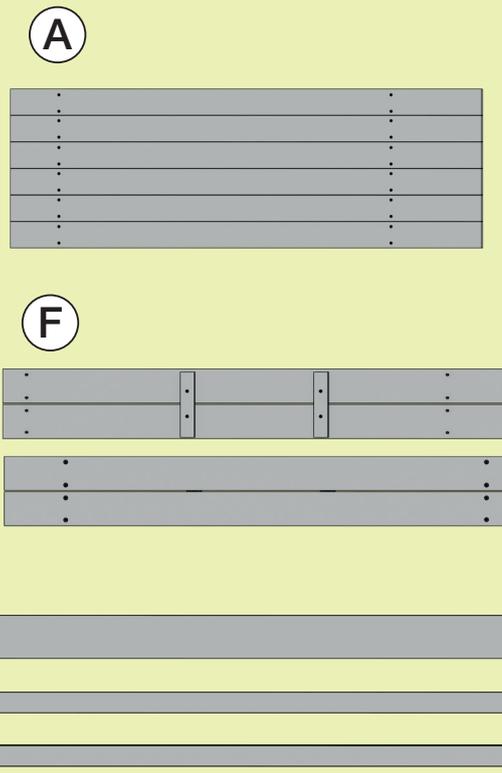

COMPONENTS

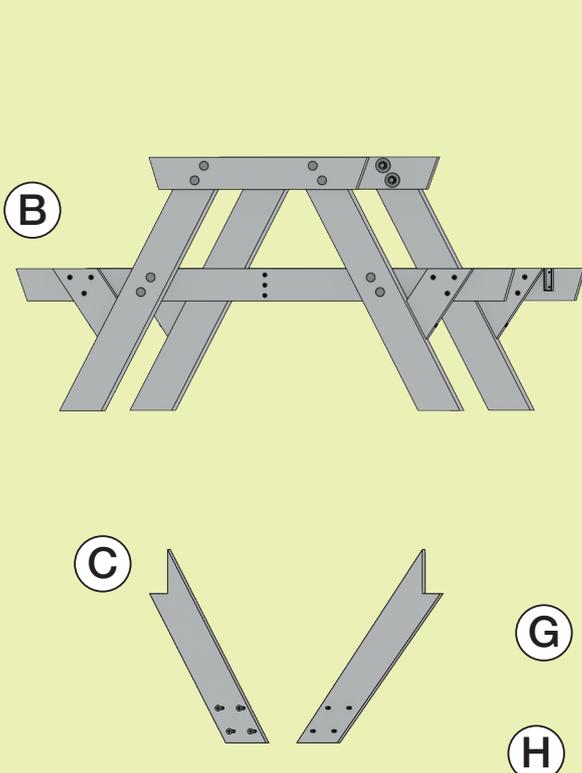


Tools required: Battery drill and PZ3 drill bit

-  6x150mm - 6pcs
-  6x100mm - 40pcs
-  8x80mm - 24pcs




1.

STAND UP THE A FRAME LEGS ON AN EVENLY FLAT AREA
BRACKETS ARE FACING TOWARDS EACH OTHER.

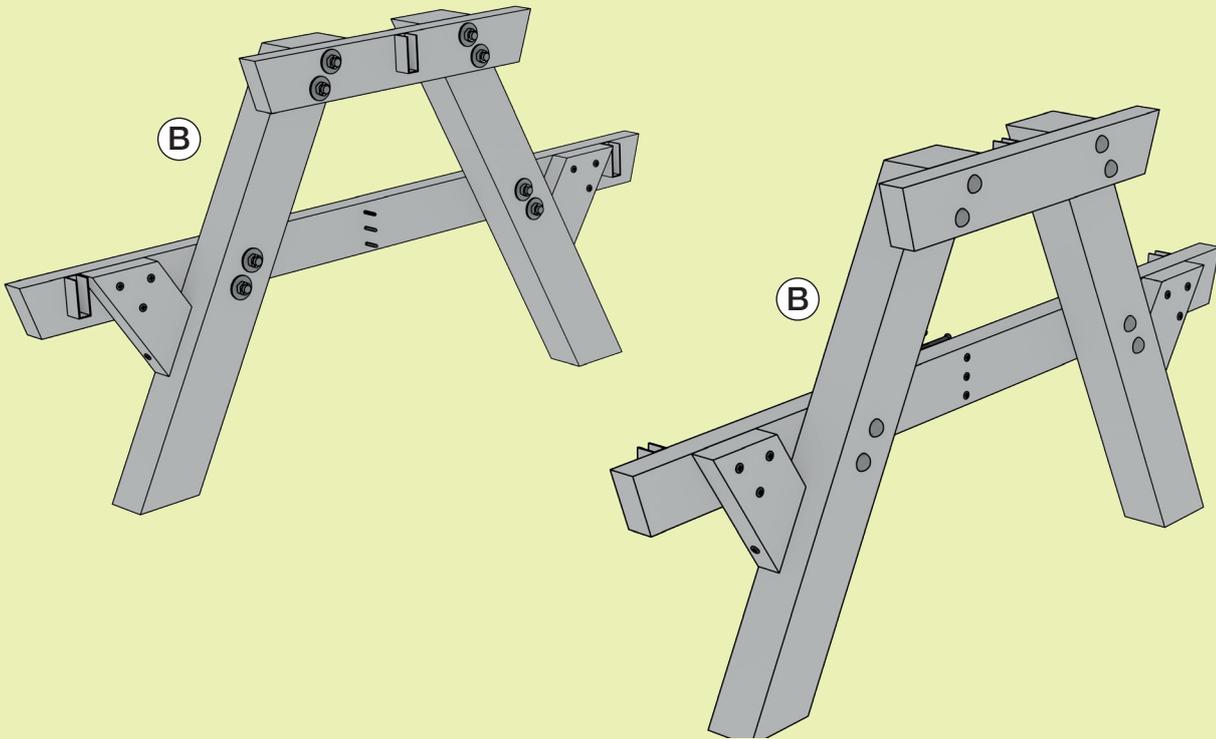


2.


GET THE PLASTIC LEG BAR AND
SCREW TO ONE OF THE A FRAME LEG,
USE 6X150MM ZINK SILVER SCREWS.

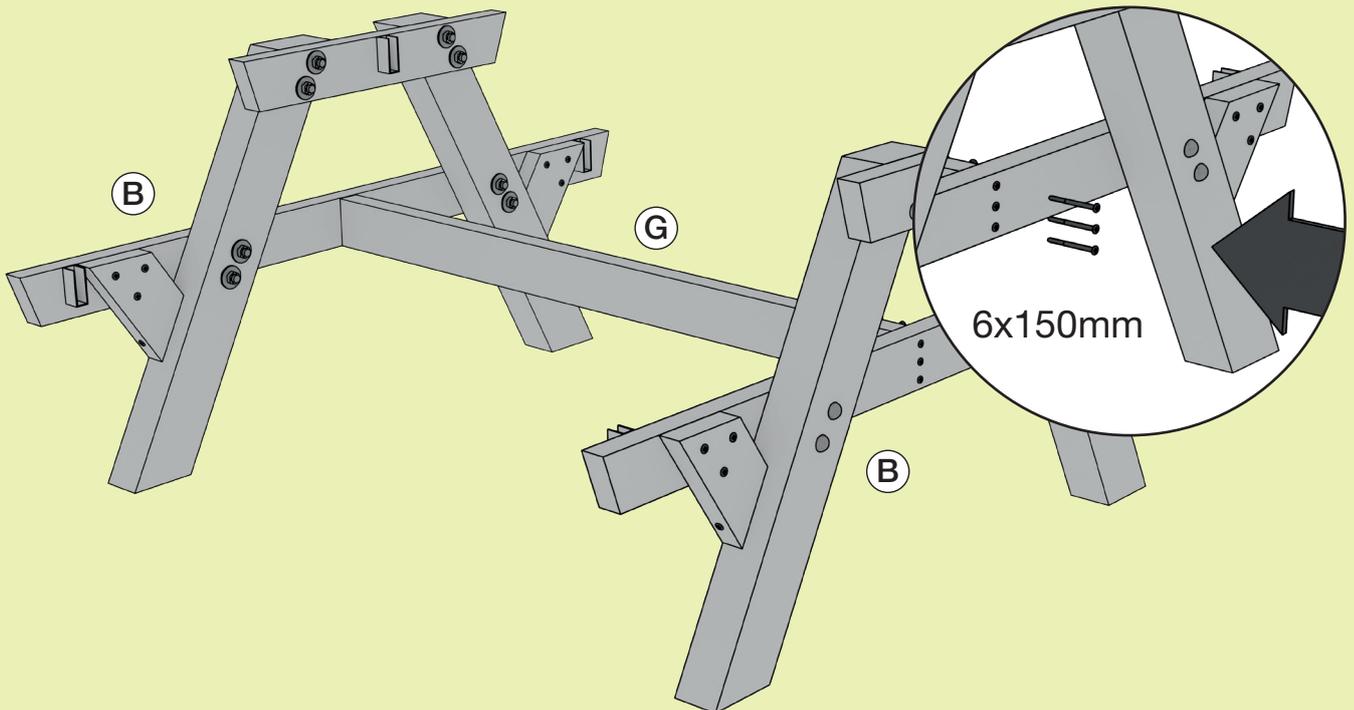


3. PLACE THE 3 STEEL BARS IN THE BRACKETS.

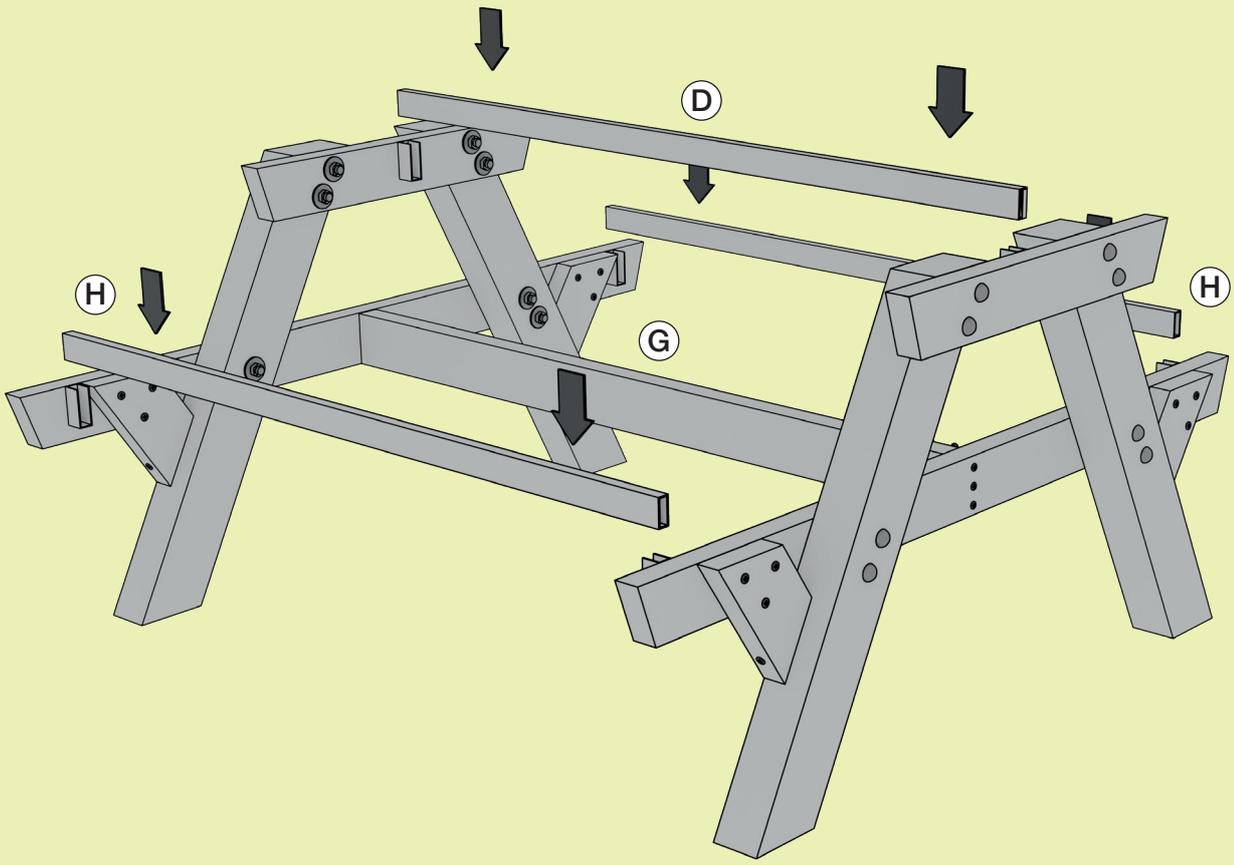

4. FIX THE PLASTIC STIFFING BRACKETS TO THE LEG BAR, USE 6X80MM ZINK SILVER SCREWS.

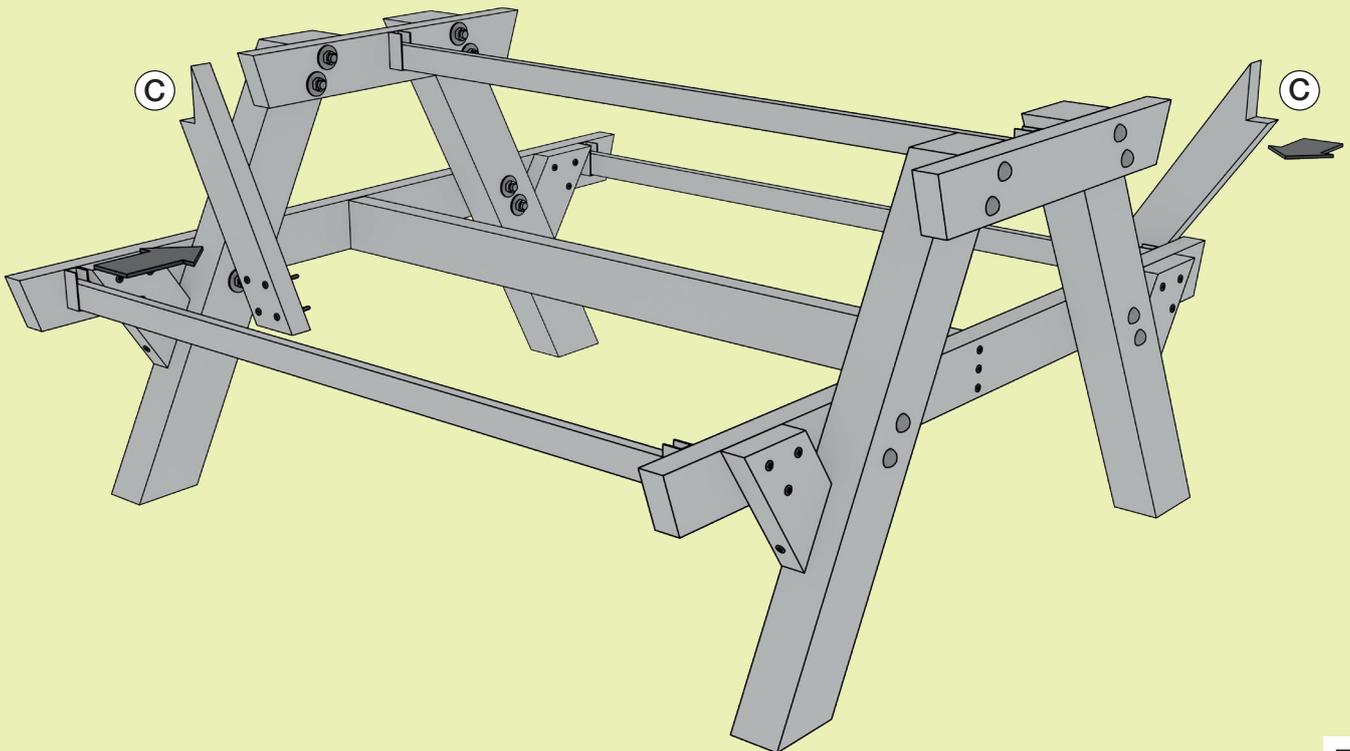

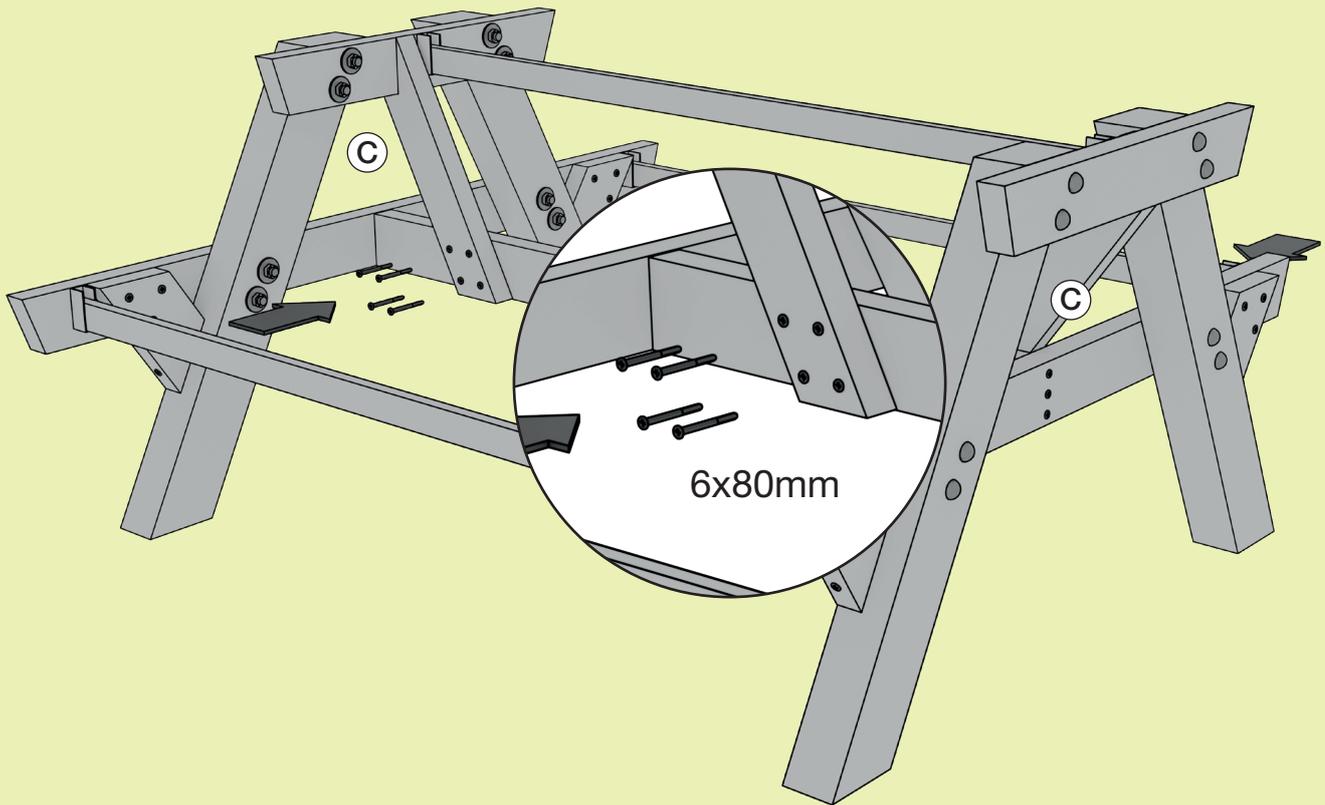

5.

PLACE THE TABLE TOP ON THE A FRAMES, SCREW HOLES CENTERED IN THE TOP FRAME BAR. SCREW THE TABLE TOP WITH 6X100MM ZINK SILVER SCREWS.

