




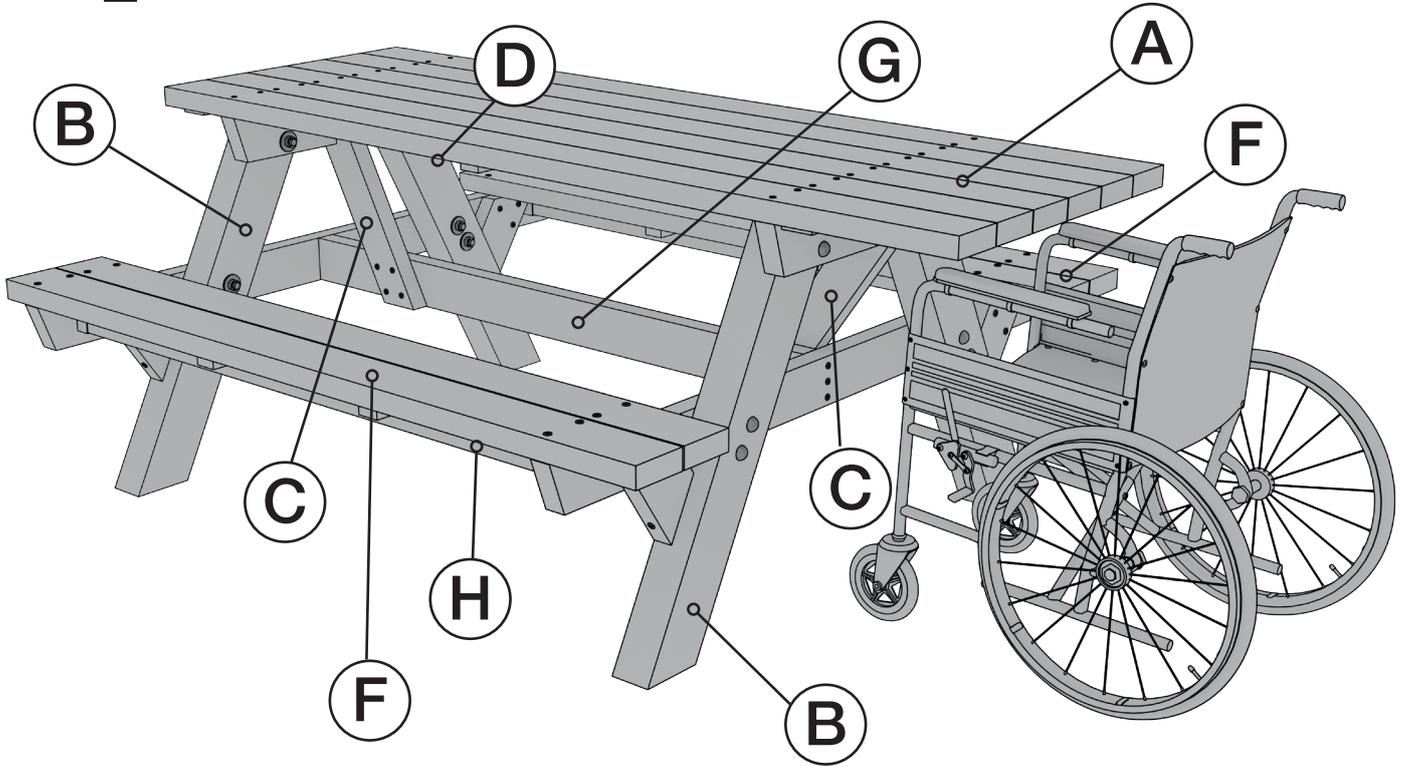

JANE ASSEMBLY INSTRUCTIONS

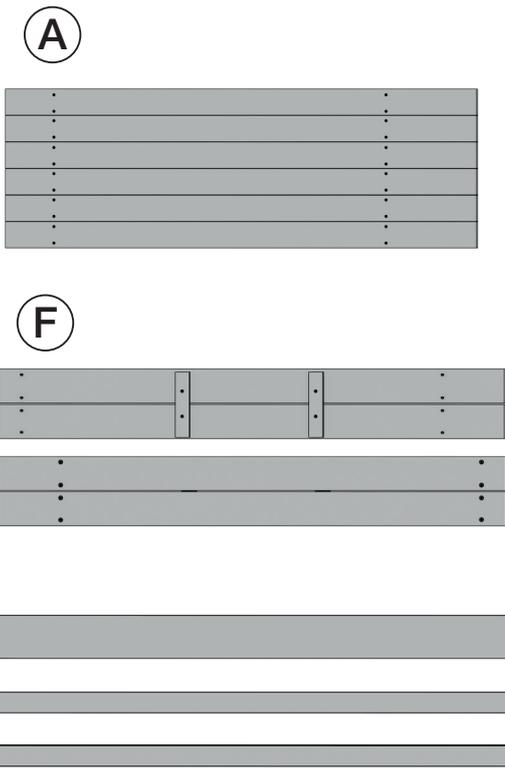

COMPONENTS

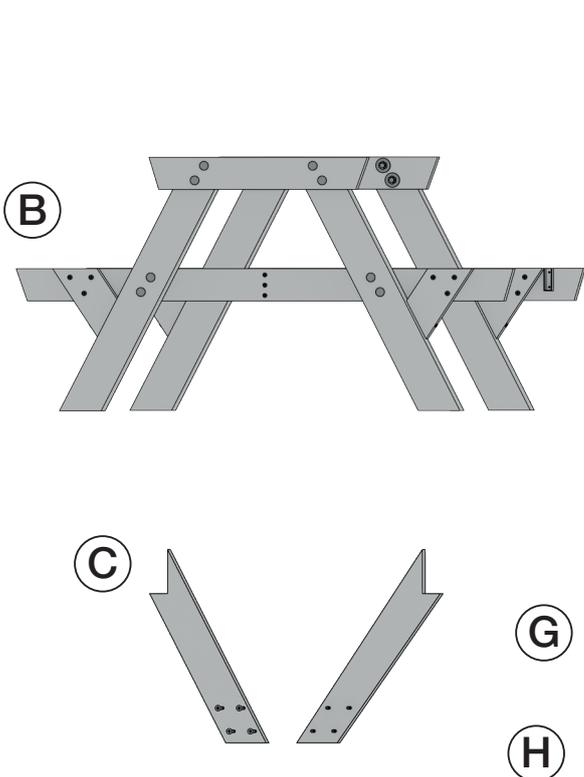


Tools required: Battery drill and PZ3 drill bit

- 6x150mm - 6pcs
- 6x100mm - 40pcs
- 8x80mm - 24pcs




1.

STAND UP THE A FRAME LEGS ON AN EVENLY FLAT AREA
BRACKETS ARE FACING TOWARDS EACH OTHER.

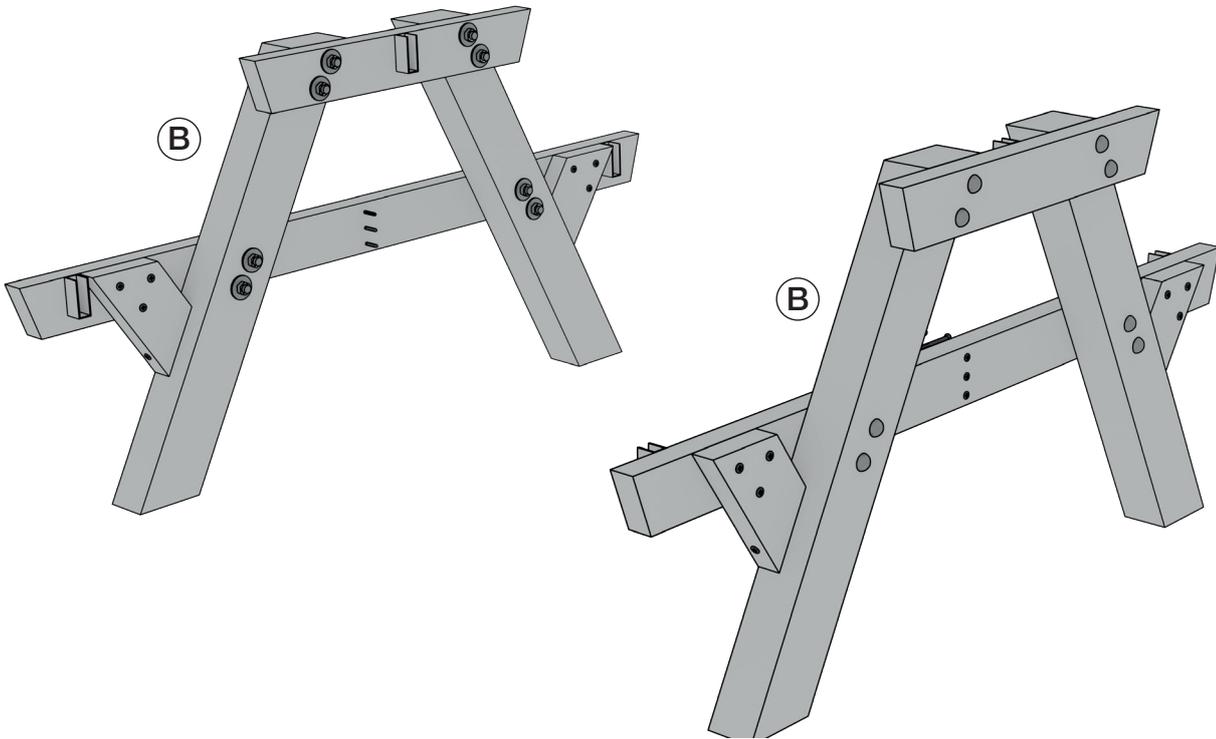


2.


GET THE PLASTIC LEG BAR AND
SCREW TO SCREW TO THE FRAME LEGS,
USE 6X150MM ZINK SILVER SCREWS.

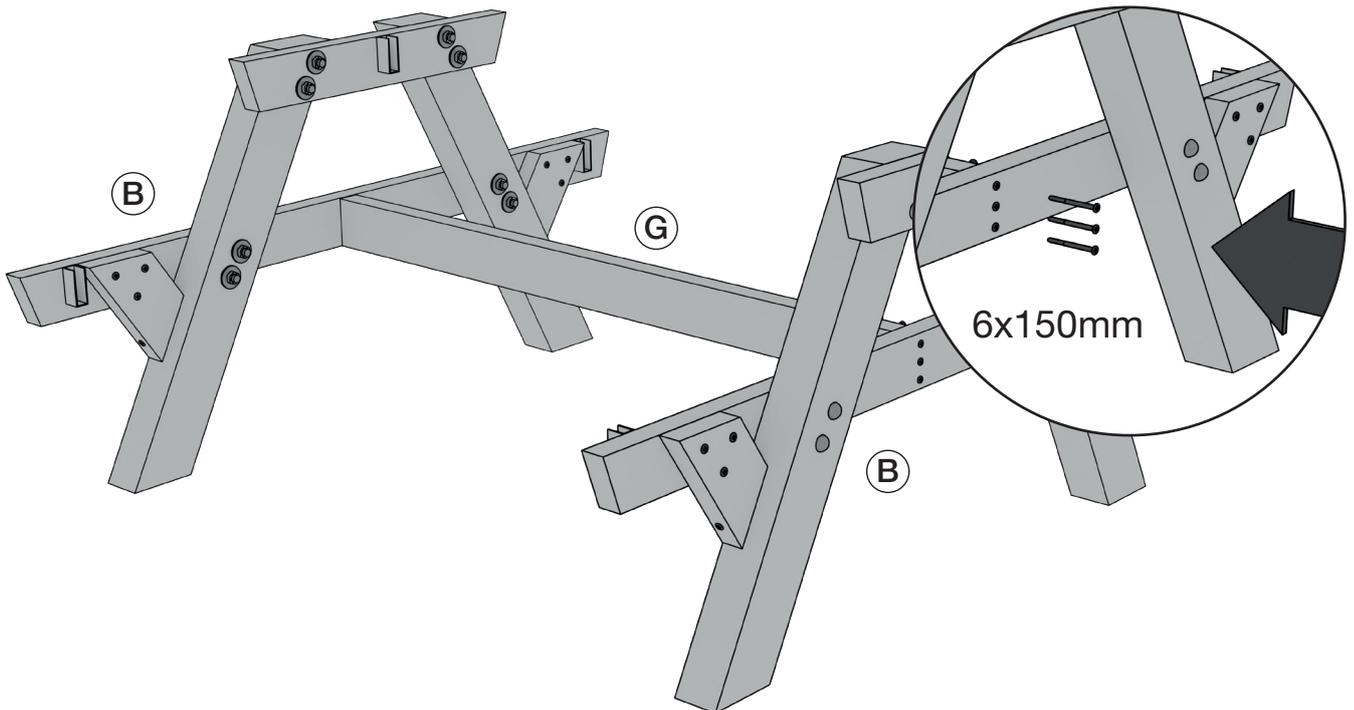


3. PLACE THE 3 STEEL BARS IN THE BRACKETS.

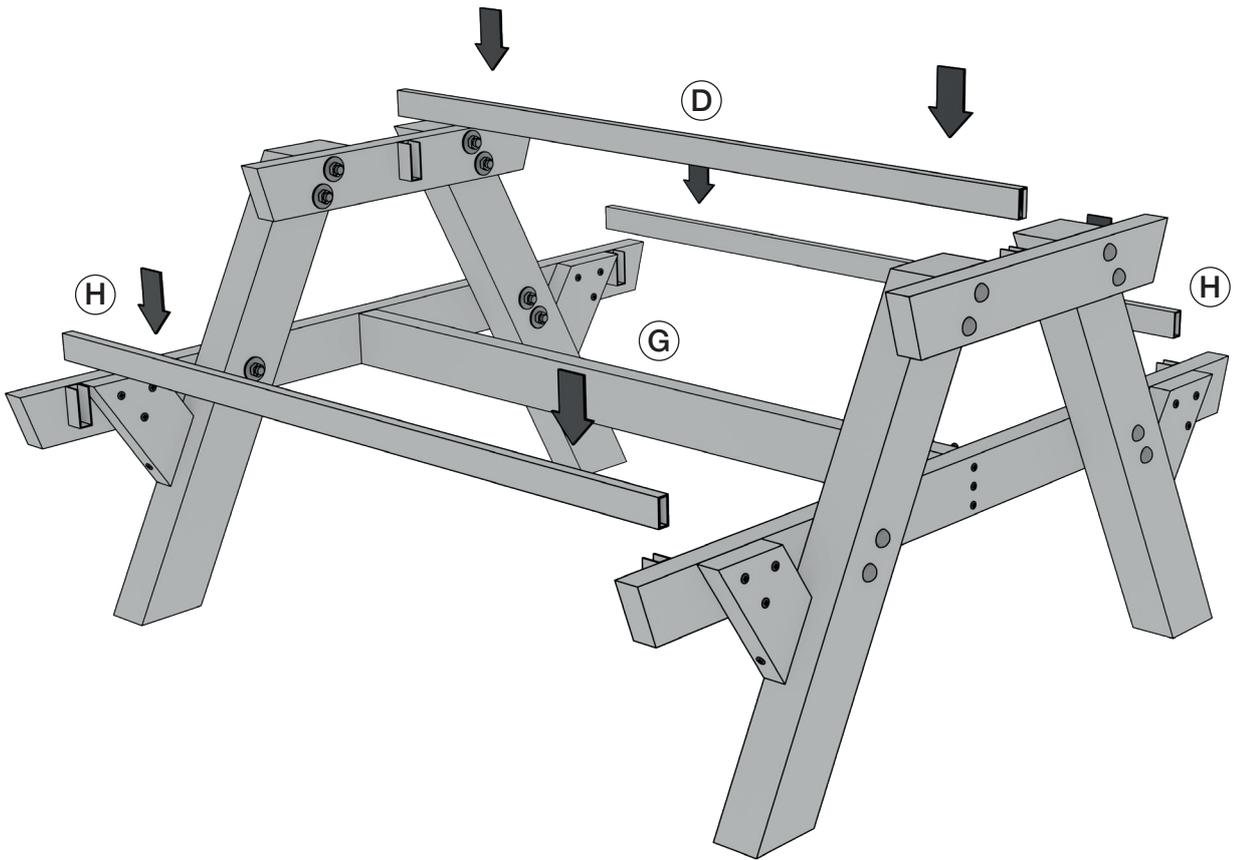

4. FIX THE PLASTIC STIFFING BRACKETS TO THE LEG BAR, USE 6X80MM ZINK SILVER SCREWS.

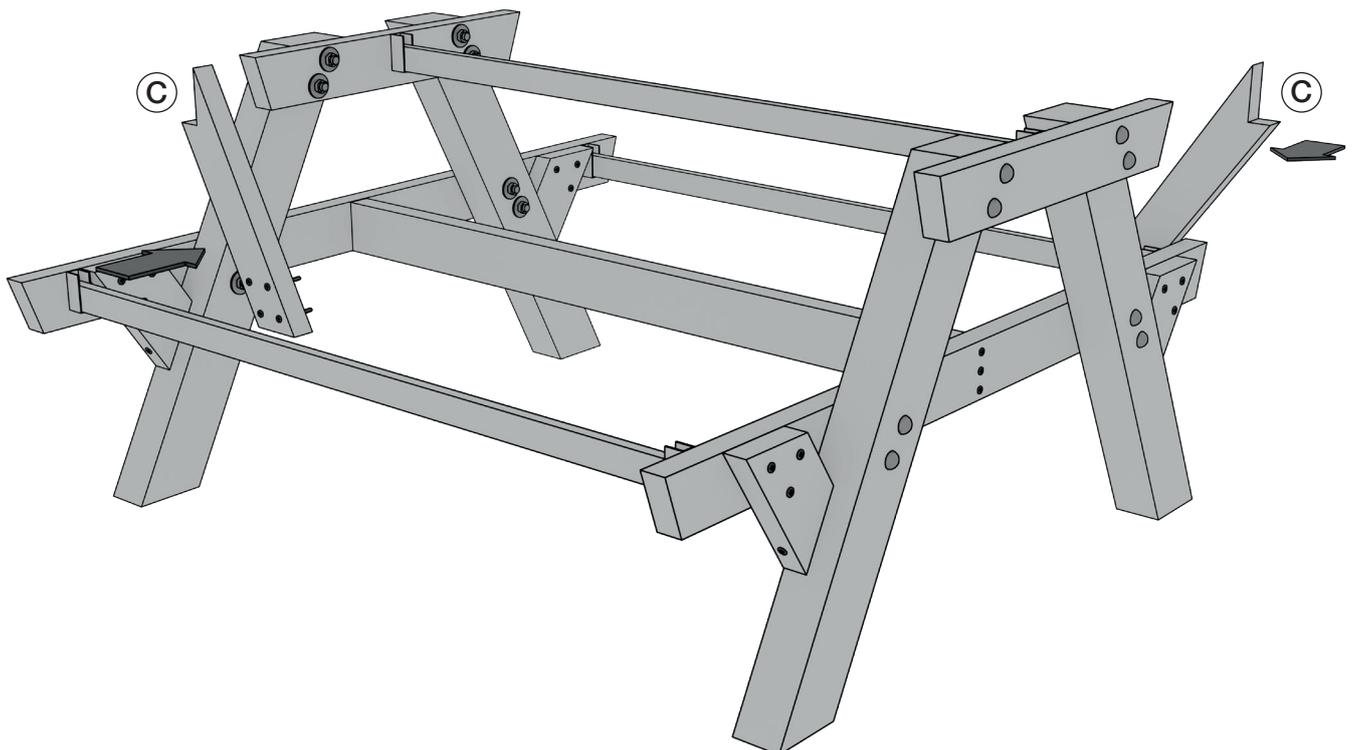

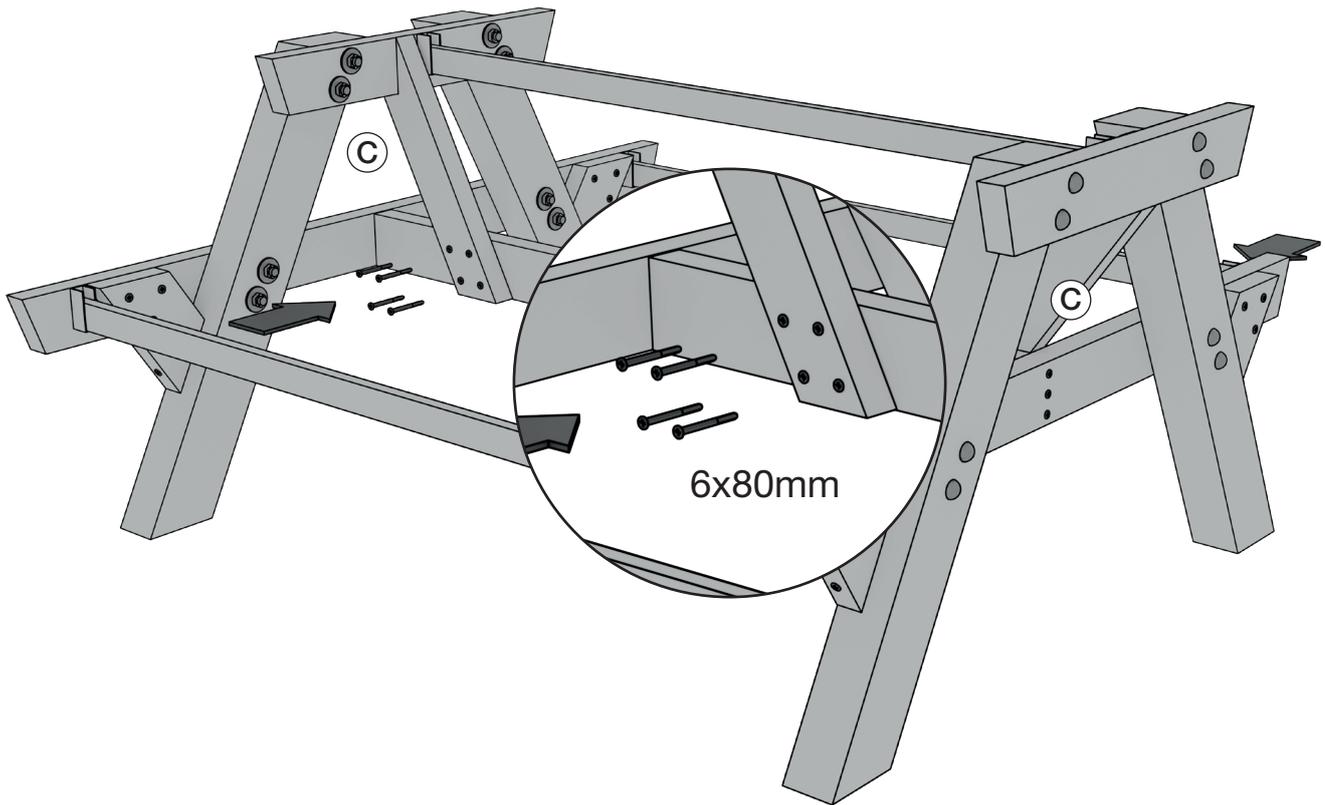

5.

PLACE THE TABLE TOP ON THE A FRAMES, SCREW HOLES CENTERED IN THE TOP FRAME BAR. SCREW THE TABLE TOP WITH 6X100MM ZINK SILVER SCREWS.

