




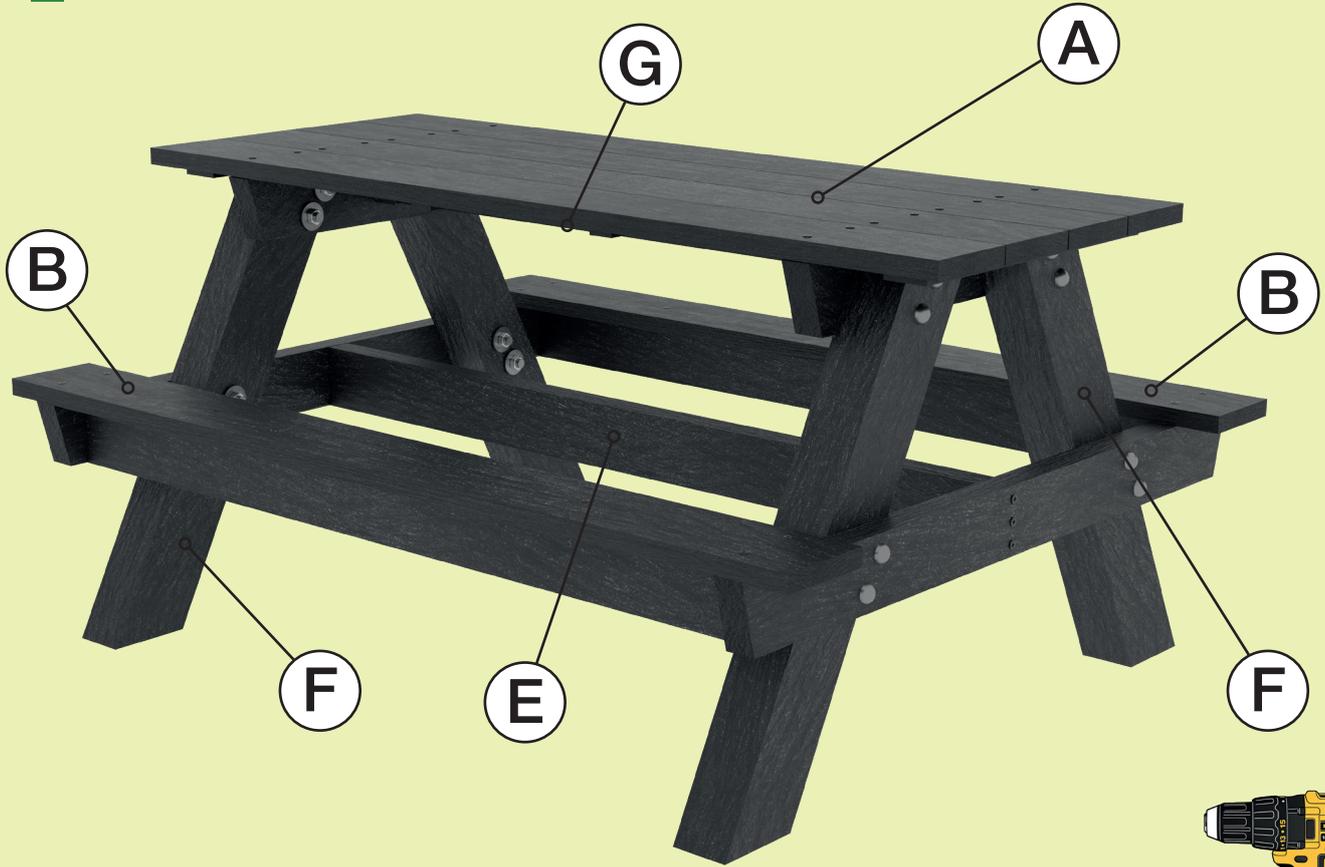


TINY TABLE ASSEMBLY INSTRUCTIONS

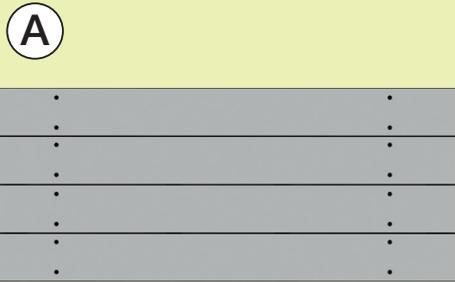


COMPONENTS

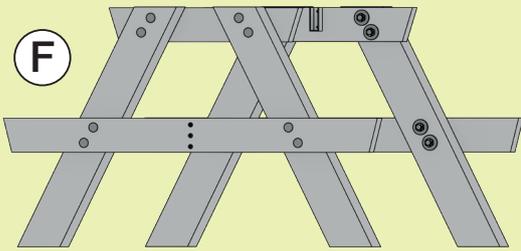


Tools required: Battery drill and PZ3 drill bit

-  6x150mm - 6pcs
-  6x100mm - 8pcs
-  6x70mm - 24pcs

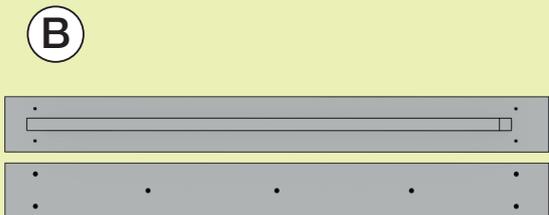


1.

STAND UP THE A FRAME LEGS ON AN EVENLY FLAT AREA
BRACKETS ARE FACING TOWARDS EACH OTHER.

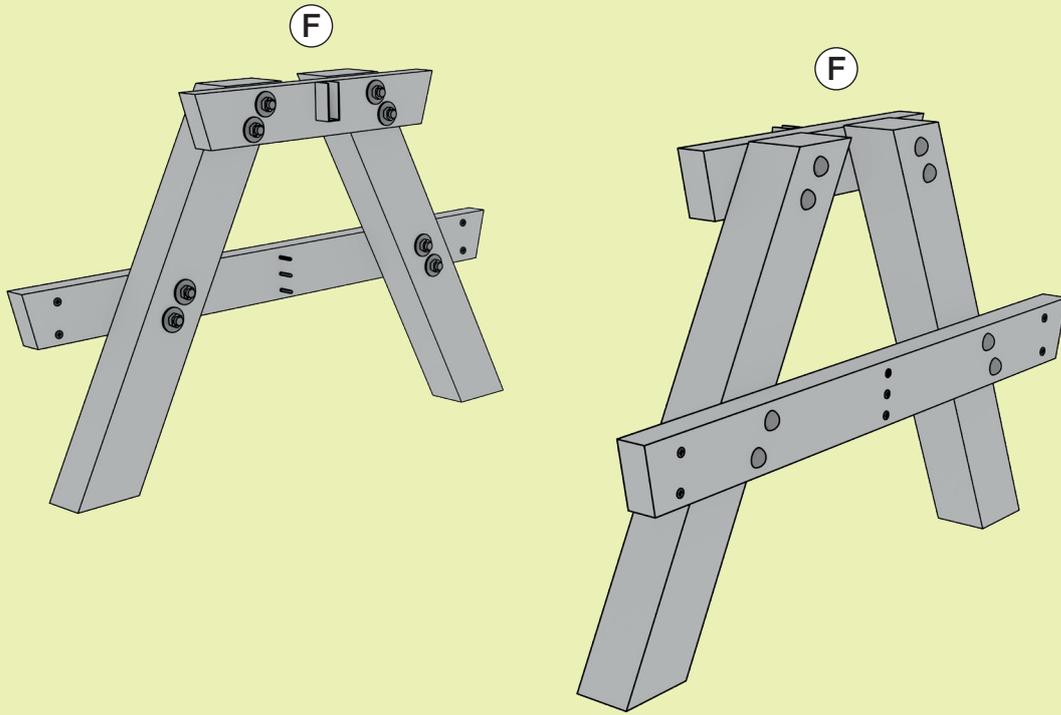


2.


ATTACH THE LEG BAR TO THE TWO A-FRAMES WITH
THE 6X150MM SILVER ZINC SCREWS.

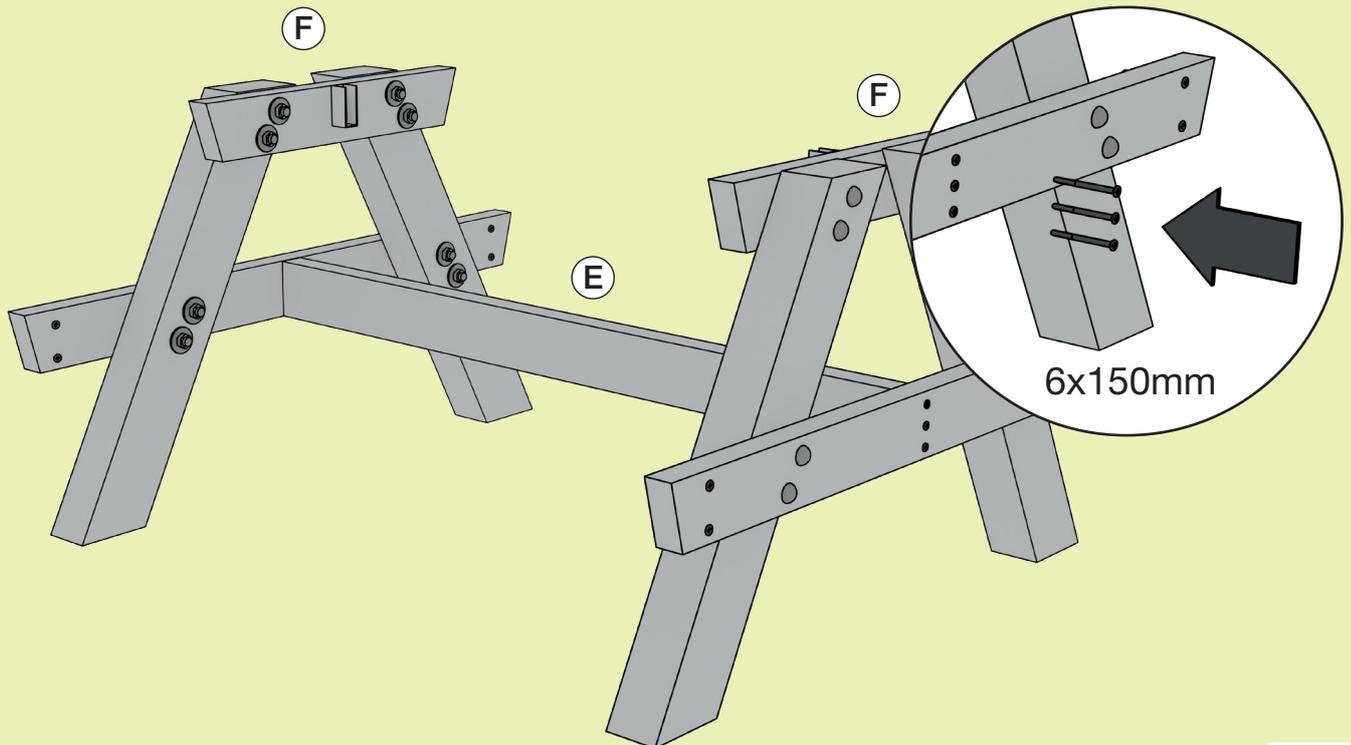

3. PLACE THE SUPPORT STEEL BAR INTO THE U-SHAPED BRACKETS

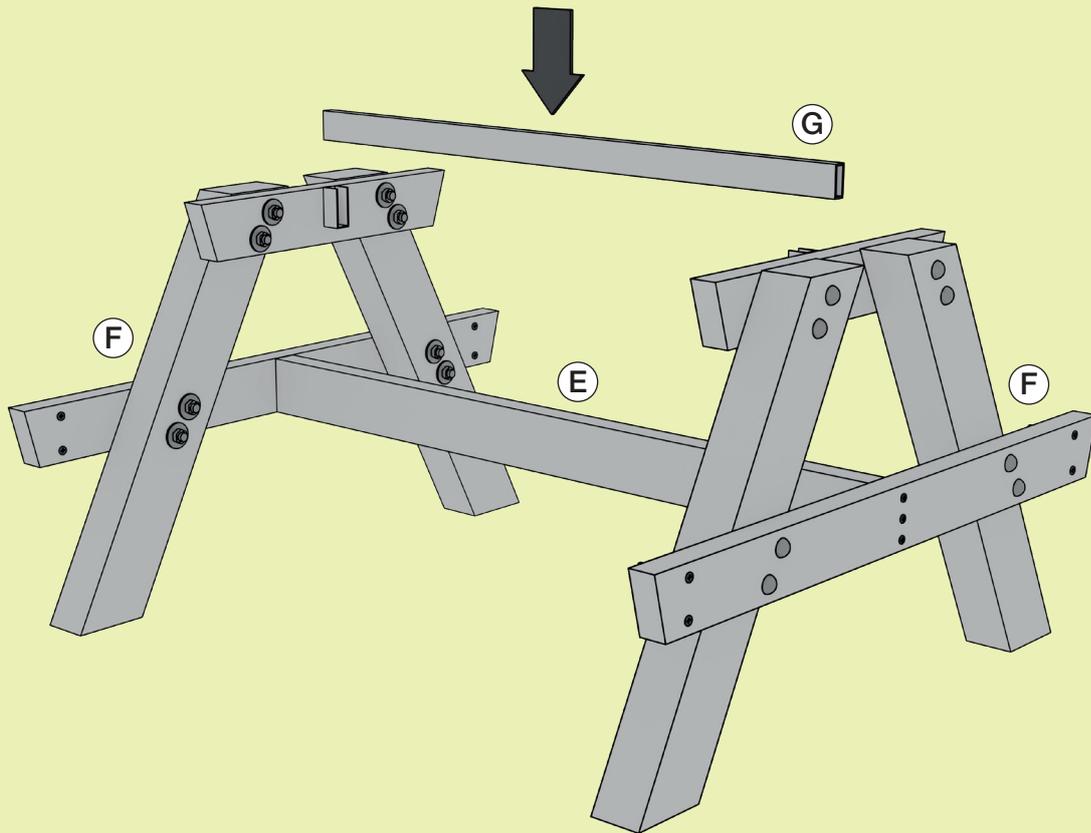


4. PLACE THE T-SHAPED SEATS ON THE SUPPORT BRACKETS

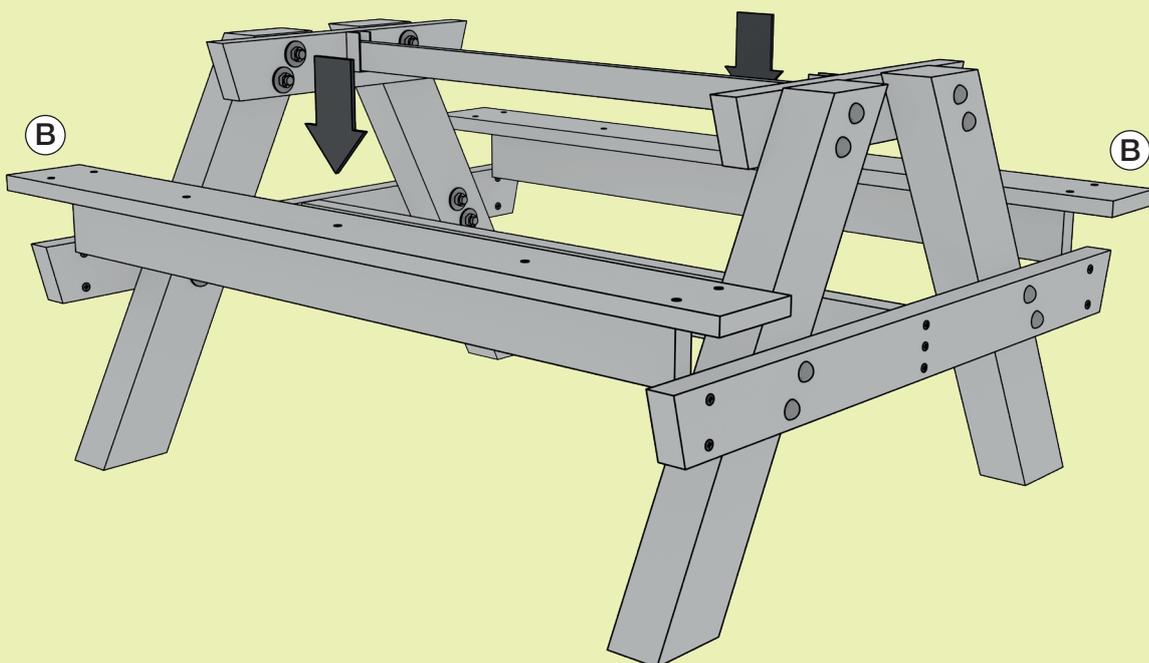

5.

ATTACH THE LEG BAR TO THE TWO A-FRAMES WITH THE 6X70MM SILVER ZINC SCREWS.

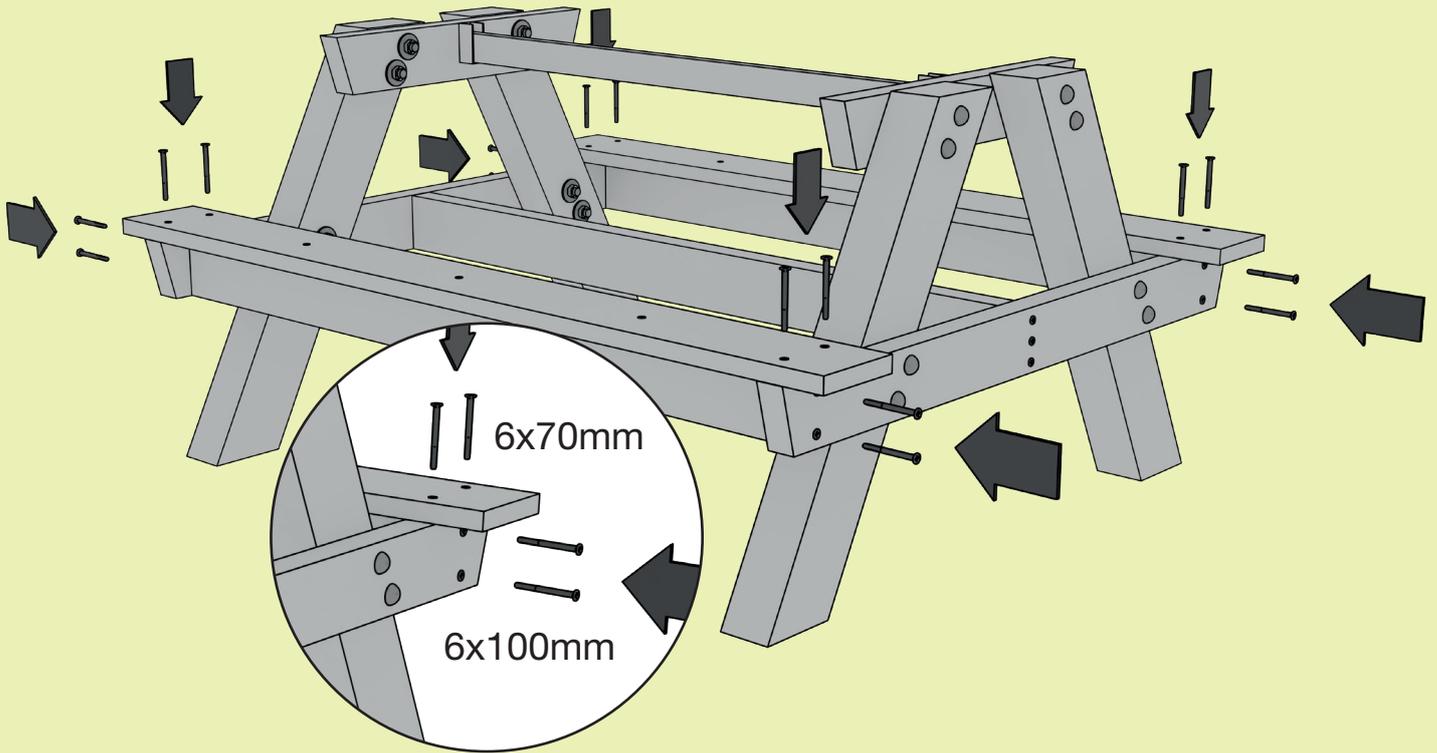

6.

PLACE THE TABLE TOP ON THE A FRAMES, SCREW HOLES CENTERED IN THE TOP FRAME BAR. SCREW THE TABLE TOP WITH 6X70MM ZINK SILVER SCREWS.

